
Hob guide

Davoline HVC6005T · ceramic hob with touch controls

Four cooking zones, a few touches. Please read before first use.


1 The hob

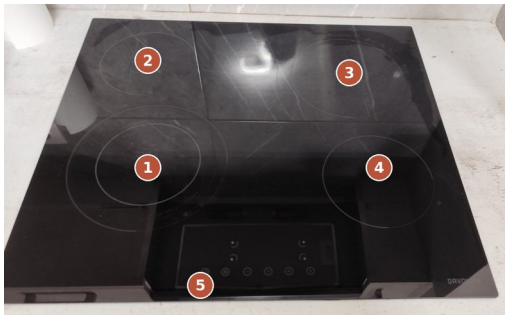

The hob in the kitchen

1. **Front left:** double zone, small or large ring (up to 2200 W). The large ring is for big pans (see 3).
2. **Rear left:** small zone, 1200 W.
3. **Rear right:** large zone, 1800 W.
4. **Front right:** small zone, 1200 W.
5. **Control panel** (touch buttons).

2 The control panel

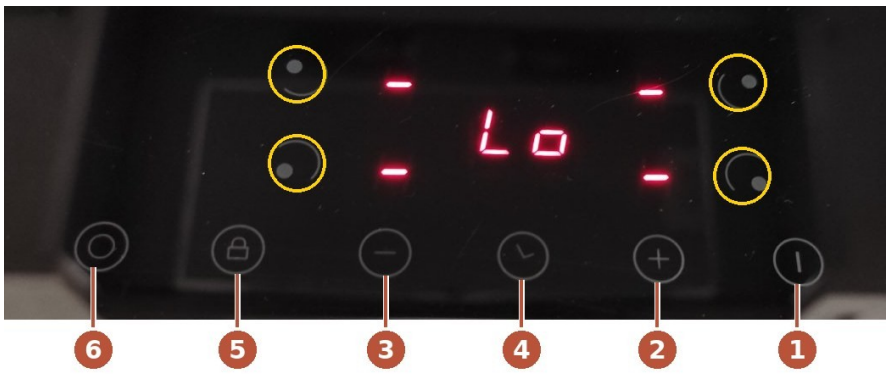


1. **ON / OFF** switches the whole hob on or off.
2. **+** more heat (levels 1 to 9).
3. **–** less heat. Down to 0 switches the zone off.
4. **Timer** switches a zone off after the minutes you set.
5. **Lock** child lock. **Lo** on the display = locked.
6. **Double zone** large ring of the front left zone.

Zone keys (yellow circles): one next to each display. The dot shows which zone it controls, e.g. dot top left = rear left zone.

3 How to cook


1. Press **ON / OFF** (1). You hear a beep and every display shows **–**.
2. Put a pan in the **centre** of the zone. Pan bottom and glass must be clean and dry.
3. Touch the **zone key** next to the zone you want. Its display flashes.
4. Set the heat with **+** (2) or **–** (3). Do it within **1 minute**, otherwise the hob switches off and you start again. You can change the level at any time.

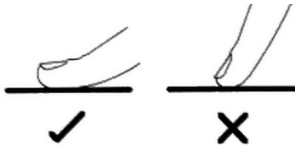


Touch the buttons with the **flat pad** of your finger, not the tip.



No pans with an **uneven or curved bottom**.

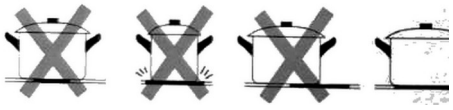

Pan **in the centre**, flat on the glass, the **same size** as the zone.

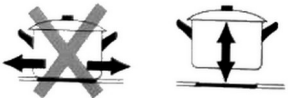

Lift pans, do not slide them: it scratches the glass.

When you have finished: touch the zone key, then press **–** until the display shows **0**. To switch off the whole hob, press **ON / OFF**.

H on a display = this zone is **still hot**. Do not touch it. It goes off when the glass has cooled down.

Large ring (front left only): touch the front left zone key, and while the level flashes press **Double zone** (6). After 5 seconds the display shows the level and **=** in turn. To go back to the small ring, touch the zone key and press **Double zone** again.

4 Which heat level?

Level	Good for
1–2	Melt chocolate or butter, keep food warm, gentle simmering.
3–4	Reheating, steady simmering, cooking rice.
5–6	Pancakes and crêpes.
7–8	Sautéing, cooking pasta.
9	Stir-fry, searing meat, boiling water. Then turn it down.

5 Timer and child lock

Switch a zone off automatically:

1. Touch the zone key, then press **Timer** (4). The display shows **00**.
2. Set the minutes with **+ / –** (e.g. 5), press **Timer** again and set the tens (e.g. 2 = 25 minutes).
3. The countdown starts. When the time is up, that zone switches off. The others keep working.

To cancel: touch the zone key, press **Timer**, then **–** to **00**. If no zone is selected, the timer only beeps (for 30 seconds) and shows **– –**.

Child lock: press **Lock** (5) and **Lo** appears. All buttons stop working except ON / OFF. **To unlock:** switch the hob on and **hold Lock for 3 seconds**.

6 Safety

SAFETY

- **Never leave the hob unattended**, especially when frying. Hot oil and fat can catch fire very quickly.
- **If oil or fat catches fire:** switch the hob off and cover the pan with a lid or a damp tea towel. **Never use water.** In an emergency call **112**.
- The glass stays **very hot** after cooking. Keep children away and watch for the **H** sign.
- Keep the control panel **dry and free** of towels, utensils and pans. Even a little water can make the buttons stop or switch the hob off.
- Do not put foil, plastic or anything that can melt on the glass. If the glass is **cracked**, switch off and call us.
- A zone switches itself off if left on too long: after **8 h** on levels 1–3, **4 h** on 4–6, **2 h** on 7–9.

7 Cleaning

- Let the glass cool down, then wipe it with a damp cloth and a little ceramic hob cleaner or washing-up liquid. Dry with kitchen paper.
- **Sugar or melted plastic:** remove it straight away, while the glass is still warm, with the hob scraper held at about 30°. Careful, the blade is sharp.
- No scourers, steel wool or sprays, please. No need for deep cleaning, we take care of it.

8 Quick fixes

Buttons do nothing / "Lo"	The hob is locked. Switch it on and **hold Lock for 3 seconds**.
A zone switched itself off	No level was set within 1 minute, the timer ended, or the safety switch-off. Set it again.

Need help? WhatsApp / call +30 694 358 7818