Dishwasher guide

Candy Brava CDIH 1D952 · built-in dishwasher


Load, add a tablet, press Start. Please read before first use.

1 The control panel



1. **ON / OFF** switches the dishwasher on or off.
2. **P** choose the programme (P1 to P7).
3. **Delay start** start later, 1 to 23 hours.
4. **Display** programme (e.g. **ECO**) and time left.
5. **Options** e.g. Express (faster). Not needed.
6. **Warning lights** ✱ rinse aid, S salt. If one is on, just tell us.
7. **Start / Pause** starts the programme.
8. **Programme list** P1 to P7 (see 5).

2 Tablets and citric acid

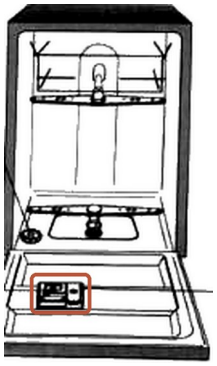

Tablet dispenser on the inside of the door

WHERE TO FIND THEM

All-in-one tablets and **citric acid** (a white powder) are in a **plastic box in the cupboard under the kitchen sink**.

1. **Tablet:** put **one tablet** in the dispenser on the door and close the lid until it clicks.
2. **Citric acid:** sprinkle **1 teaspoon** over the dirty dishes. The local water is hard, and this gives much cleaner results, especially on pots and pans.

Never use washing-up liquid: it makes a lot of foam and can flood the kitchen.

3 Loading

- Scrape leftover food into the bin. No need to rinse the dishes first.
- **Lower basket:** plates, pots and pans, facing the centre. **Upper basket:** glasses, cups and bowls, upside down.
- **Cutlery basket:** handles down, but **knives with the blade pointing down**.
- Make sure nothing blocks the **spray arms**: they must turn freely.
- **Not in the dishwasher:** wooden boards and spoons, sharp kitchen knives, cast iron, crystal, and plastic that is not dishwasher safe.

4 Start a wash

1. Load the dishes, add **one tablet** and **1 teaspoon of citric acid** (see 2), and close the door firmly.
2. Press **ON / OFF** (1).
3. Press **P** (2) until **ECO** appears on the display: our recommended programme (P1).
4. Press **Start** (7). The display shows the time left.
5. At the end, wait a few minutes before opening: the steam is very hot. Unload the **lower basket first**, then press **ON / OFF**.

To start later: after choosing the programme press **Delay start** (3) for 1 to 23 hours, then **Start**.

5 Programmes

Programme	Temp.	Time	Good for
P1 ECO	50 °C	298 min	**Our recommendation for everyday use.** Saves the most energy and water. It takes long, so start it after dinner or with Delay start.
P2	60 °C	115 min	Normally dirty dishes, when you need them sooner.
P3	70 °C	130 min	**Pots, pans and baking trays**, very dirty dishes.
P4	45 °C	20 min	Very short wash for items that are only slightly dirty.
P5 Zoom	45 °C	30 min	Lightly dirty dishes, washed straight after the meal.
P6	45 °C	72 min	Lightly dirty dishes, full load.
P7	45 °C	98 min	Glasses and delicate items.

6 Safety

SAFETY

- Keep **tablets and citric acid away from children**. Do not swallow, and avoid contact with the eyes. If it happens, rinse with plenty of water.
- Open the door carefully at the end of a programme: **hot steam** comes out.
- Watch out for **sharp knives** when unloading. Do not sit or stand on the open door.
- If you see **water on the floor**, switch the dishwasher off and message us.

7 Quick fixes

Does not start	Close the door firmly, check a programme is chosen and press **Start**. If **Delay start** is set, it waits.
Dishes not clean	Do not overload, check the spray arms turn, use **P3** and add the citric acid.
White film on glasses	Add **1 teaspoon of citric acid** next time.
✱ or S light is on	Rinse aid or salt is low. Just tell us, we refill it.

Need help? WhatsApp / call +30 694 358 7818