Smart TV guide

HISENSE 43A6BG · VIDAA Smart TV · Living room

TV channels, satellite, Netflix and YouTube in 2 minutes.

1 The TV



The TV in the living room

1 **Screen:** HISENSE 43A6BG, 43" 4K smart TV.

2 **Remote sensor:** under the Hisense logo, bottom centre of the screen. Point the remote here.

To turn on, press the red **Power** button on the remote. The TV starts on the last channel or app used.

Please do not unplug the TV or change the cables behind it.

2 The remote



1 **Power** on / standby.

2 **INPUT** choose TV or HDMI.

3 **0–9** type a channel number.

4 **GUIDE** TV programme guide.

5 **CH.LIST** channel list.

6 **Menu** settings: channels, picture, sound, Wi-Fi.

7 **Back** one step back.

8 **OK and arrows** select and move.

9 **EXIT** close a menu or app.

10 **Home** main screen with all the apps.

11 **VOL + / –** volume.

12 **CH < / >** previous / next channel.

13 **Mute** sound off / on.

14 **NETFLIX** opens Netflix.

15 **YouTube** opens YouTube.

3 Greek TV channels (antenna)

The local channels (ERT1, ERT2, ANT1, MEGA, SKAI, ALPHA, STAR, OPEN and more) are **already tuned**. Press **INPUT** (2), choose **TV**, then use **CH** (12) or the number keys. Press **GUIDE** (4) to see what is on.

Channels missing? Scan again:

1. While watching TV, press **Menu** (6) and select **Settings** > **Channel** > **Auto Scan**.
2. Choose **Antenna**, set Channel to **Free Channels** and Scan Mode to **DTV**, then start the scan.
3. Wait until the scan finishes (about 5 minutes) and press **Back** (7).


4 Satellite channels

International channels come from the satellite dish, which receives **Hot Bird 13°E** and **Astra 19.2°E** (many German-language channels). To watch them:

1. While watching TV, press **OK** (8) or **CH.LIST** (5) to open the channel list.
2. Press the **right arrow** to switch the list from **Antenna** to **Satellite**, choose a channel and press **OK**.
3. To go back to the Greek channels, open the list again and switch it to **Antenna**.

No satellite channels? Press **Menu** > **Settings** > **Channel** > **Auto Scan** and choose **Satellite**. Select **DiSEqC** with both satellites, **Hot Bird 13°E** and **Astra 19.2°E**, set Channel to **Free Channels** and start the scan. It can take 15–20 minutes.

5 The Home screen

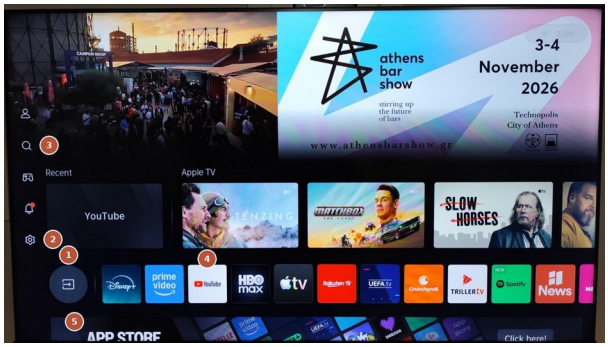

Press Home (10) on the remote

1. **Input:** choose TV (antenna or satellite) or HDMI.
2. **Settings:** Wi-Fi, picture, sound.
3. **Search:** find a film, show or app.
4. **Apps:** YouTube, Prime Video, Disney+, HBO Max and more. Move with the arrows and press **OK**.
5. **App Store:** more apps.

6 NETFLIX

1. Press the **NETFLIX** button (14) on the remote.
2. Choose **Sign In**. The easiest way: scan the QR code with your phone, or sign in with your email and password.
3. Pick your profile and enjoy.

7 YouTube

1. Press the **YouTube** button (15) on the remote.
2. You can watch without signing in. To see your own account, choose **Sign in** and follow the code on the screen at **yt.be/activate** on your phone.

From your phone: connect your phone to the villa Wi-Fi, open YouTube or Netflix and tap the **Cast** icon, then choose the Hisense TV.

BEFORE YOU CHECK OUT

Please **sign out** of your accounts so the next guests cannot use them:

Netflix: go to the menu on the left > **Get Help** > **Sign Out**.

YouTube: select your profile picture (top left) > **Sign out**.

8 Quick fixes

"No signal" on the screen	Press **INPUT** and choose **TV**. If it still shows no signal, press **OK** and check that the list is on **Antenna** or **Satellite** (steps 3 and 4).
Remote does nothing	Point it at the TV and check the 2 AAA batteries. Spare batteries: message us.
Apps say "no internet"	**Menu** > **Settings** > **Network** > **Network Configuration**: check that the TV is connected to the villa Wi-Fi.
No sound	Press **Mute** once, then VOL +.
Wrong language or subtitles in Netflix	During playback press **OK**, then choose the speech bubble icon (Audio & Subtitles).

Need help? WhatsApp / call +30 694 358 7818