Smart TV guide

TCL 32S5400A · Android TV · Bedrooms

TV channels, satellite, Netflix and YouTube in 2 minutes.


1 The TV

A 32" TCL smart TV with Android TV. The **remote sensor** is under the TCL logo, bottom centre of the screen: point the remote there.

To turn on, press the red **Power** button (1). The TV starts on the last channel or app used.

Please do not unplug the TV or change the cables behind it.

2 The remote

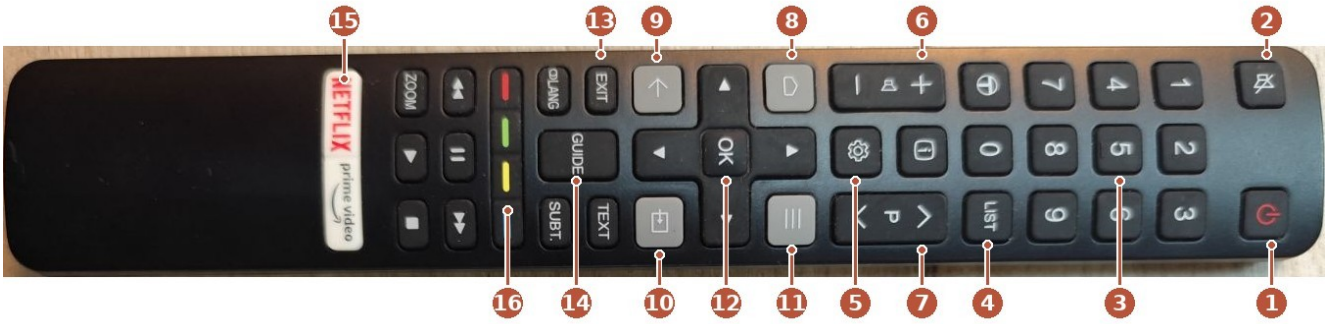


1. **Power** on / standby.
2. **Mute** sound off / on.
3. **0–9** type a channel number.
4. **LIST** channel list.
5. **Settings** channels, picture, sound, Wi-Fi.
6. **VOL – / +** volume.
7. **P < / >** previous / next channel.
8. **Home** main screen with all the apps.
9. **Back** one step back.
10. **Source** choose TV or HDMI.
11. **Menu** options for what you are watching.
12. **OK and arrows** select and move.
13. **EXIT** close a menu or app.
14. **GUIDE** TV programme guide.
15. **NETFLIX** opens Netflix.
16. **Yellow** tuner mode: antenna / satellite.


3 Greek TV channels (antenna)

The local channels (ERT1, ERT2, ANT1, MEGA, SKAI, ALPHA, STAR, OPEN and more) are **already tuned**. Press **Source** (10) and choose **TV**, or open the **TV** app on the Home screen. If you see satellite channels, switch to **Κεραία** (Antenna) as in step 4. Then use **P < / >** (7) or the number keys. Press **GUIDE** (14) to see what is on.

4 Satellite channels

International channels come from the satellite dish, which receives **Hot Bird 13°E** and **Astra 19.2°E** (many German-language channels). The TV menus are in Greek, so look for these words:

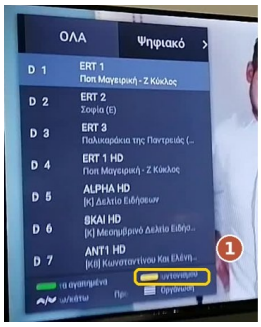

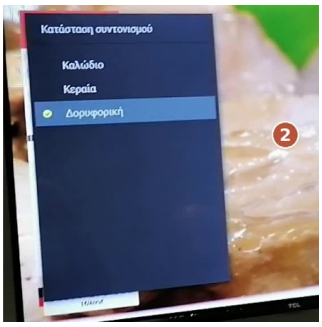

(1) Yellow button in the list *(2) Tuner mode*

1. While watching TV, press **LIST** (4). The channel list shows **Ψηφιακό** (antenna) or a satellite name at the top.
2. Press the **YELLOW** button (16). **Κατάσταση συντονισμού** (Tuner mode) opens.
3. Choose **Δορυφορική** (Satellite) and press **OK**. For the Greek channels choose **Κεραία** (Antenna).
4. Pick a channel and press **OK**.

Channels missing? Press **Settings** (5) > **Channel** > **Channel scan**, choose **Antenna** or **Satellite** (both satellites, **Hot Bird 13°E** and **Astra 19.2°E**) and start the scan. Or simply message us.

5 The Home screen



Press Home (8) on the remote

1. **Search:** find a film, show or app.
2. **Apps:** all the apps on the TV.
3. **Input:** choose TV or HDMI.
4. **Settings:** Wi-Fi, picture, sound.
5. **Favourite apps:** Netflix, Prime Video, YouTube, HBO Max and more. Move with the arrows and press **OK**.
6. **TV:** live TV channels.

6 NETFLIX

1. Press the **NETFLIX** button (15) on the remote.
2. Choose **Sign In**. The easiest way: scan the QR code with your phone, or sign in with your email and password.
3. Pick your profile and enjoy.

7 YouTube

1. Press **Home** (8) and select **YouTube** in the Favourite apps row.
2. You can watch without signing in. To see your own account, choose **Sign in** and follow the code on the screen at **yt.be/activate** on your phone.

From your phone: connect your phone to the villa Wi-Fi, open YouTube or Netflix and tap the **Cast** icon, then choose the TCL TV.

BEFORE YOU CHECK OUT

Please **sign out** of your accounts so the next guests cannot use them:

Netflix: go to the menu on the left > **Get Help** > **Sign Out**.

YouTube: select your profile picture (top left) > **Sign out**.

8 Quick fixes

"No signal" on the screen	Press **Source** and choose **TV**. If it still shows no signal, press **LIST**, then the **YELLOW** button, and choose **Κεραία** or **Δορυφορική** (step 4).
Remote does nothing	Point it at the TV and check the 2 AAA batteries. Spare batteries: message us.
Apps say "no internet"	**Settings** > **Network & Internet**: check that the TV is connected to the villa Wi-Fi.
No sound	Press **Mute** once, then VOL +.
Wrong language or subtitles in Netflix	During playback press **OK**, then choose the speech bubble icon (Audio & Subtitles).

Need help? WhatsApp / call +30 694 358 7818