Washing machine guide

United UWM-7108 · 7 kg front loader (bathroom)

Clothes and a tablet in the drum, turn the knob, press Start.

1 The machine



United UWM-7108


1 **Detergent drawer** pull it out. The softener powder goes in the **left** compartment.

2 **Programme knob** turn it to a programme. **Off** is at the top.

3 **Buttons** temperature, spin, delay start and Start / Pause (below).

4 **Door** push firmly until it **clicks**.

5 **Pump filter** for our staff only.

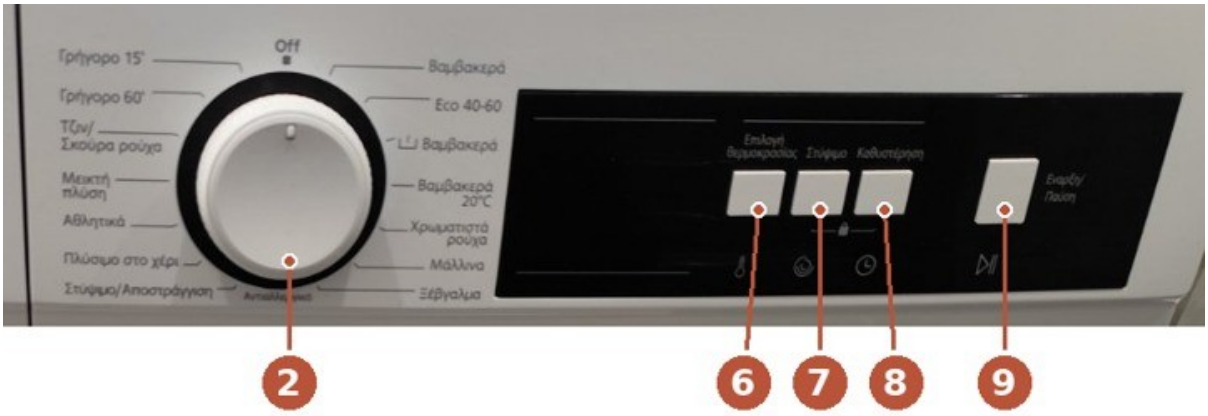

6 **Temperature** change the wash temperature.

7 **Spin** change the spin speed, or no spin.

8 **Delay start** start later.

9 **Start / Pause** starts or pauses the wash.

2 Tablets and water softener

WHERE TO FIND THEM

All-in-one tablets and **washing machine water softener** (a white powder) are in a **plastic box in the cupboard under the bathroom sink**.

1 **Tablet:** put **one tablet directly into the drum**, at the back, **together with the clothes**. Not in the drawer.

2 **Softener:** put **1 teaspoon** of the white powder in the **LEFT compartment of the detergent drawer** (1). The local water is very hard, and this protects the machine and your clothes.

3 Preparing and loading

- Check the **care labels**. Wash **whites and colours separately**, new coloured clothes on their own.
- **Empty all pockets** (coins, keys, tissues), close zips, turn clothes inside out. Small items in a laundry bag.
- Load loosely, **no more than the drum can hold** (see Max kg below). Check nothing is caught in the **door seal**, then close the door until it clicks.

4 Start a wash

1. Load the clothes and add **one tablet** in the drum. Close the door until it clicks.
2. Add **1 teaspoon of softener** in the **left** drawer compartment and close the drawer.

3. Turn the knob (2) to the programme you want, e.g. **Γρήγορο 60′ (Quick 60′)**.
4. If you wish, change the **temperature** (6) or **spin** (7). 30 to 40 °C is enough for most clothes.
5. Press **Start / Pause** (9). The display shows the time left.
6. When the display shows **End**, wait about **2 minutes** until the door unlocks. Take the clothes out and turn the knob to **Off**.

Leave the door open a little after use so the drum can dry.

5 Programmes

On the knob (clockwise from Off)	Programme	Good for	Max kg	Time
Βαμβακερά	**Cotton**	Towels, sheets, sturdy cotton.	7	230′
Eco 40-60	**Eco 40-60**	**Full loads of towels and bedding.** Saves energy, but long.	7	208′
Ш Βαμβακερά	**Cotton + prewash**	Very dirty clothes only.	7	164′
Βαμβακερά 20°C	**Cotton 20 °C**	Lightly dirty cotton, cold wash.	3.5	96′
Χρωματιστά ρούχα	**Colours**	Coloured clothes, 30 to 40 °C.	3.5	225′
Μάλλινα	**Wool**	Wool marked “machine washable”.	2.5	39′
Ξέβγαλμα	**Rinse**	Rinse and spin only, e.g. swimwear.	7	30′
Αντιαλλεργικό	**Anti-allergy**	Baby clothes, sensitive skin.	3.5	197′
Στύψιμο/Αποστράγγιση	**Spin / Drain**	Spin only, or pump the water out.	7	15′
Πλύσιμο στο χέρι	**Hand wash**	Delicates.	2.5	90′
Αθλητικά	**Sportswear**	Sports and easy-care clothes.	3.5	110′
Μεικτή πλύση	**Mixed**	Cotton and synthetics together.	3.5	105′
Τζιν/Σκούρα ρούχα	**Jeans / Darks**	Jeans and dark clothes, 30 °C.	3.5	96′
Γρήγορο 60′	**Quick 60′**	**Our recommendation for everyday holiday clothes.**	3	60′
Γρήγορο 15′	**Quick 15′**	Lightly worn clothes, e.g. after the beach.	2	15′

Times are approximate and change with the load, temperature and spin.

6 Safety

SAFETY

- Keep **tablets and softener away from children**. Do not swallow, and avoid contact with the eyes. If it happens, rinse with plenty of water.
- **Do not open the door** while the machine is washing. The glass can be **hot** at 60 °C or more.
- Do not wash clothes with **petrol, solvents or other flammable** stains. No metal items (hooks, pins) in the drum.
- Do not let children play with or climb into the machine. Never touch the plug with wet hands.
- If you see **water on the floor**, turn the knob to **Off** and message us.

7 Quick fixes

Does not start	Close the door until it **clicks**, choose a programme and press **Start / Pause** (9).
Door will not open	Wait about 2 minutes after **End**. It stays locked while there is water inside.
E01 on the display	The door is not closed properly. Close it firmly.
E02, E03 or E04	Water supply or drain problem. Turn the knob to **Off** and message us.

Need help? WhatsApp / call +30 694 358 7818